


# Keyhole Piano Hovering Insert Installation Brief

Required tools - 1/4" hex head driver



Recommended tools (nutdriver above not necessary with these tools) - right angle drill driver, 1/4" extension rod, 1/4" hex bit

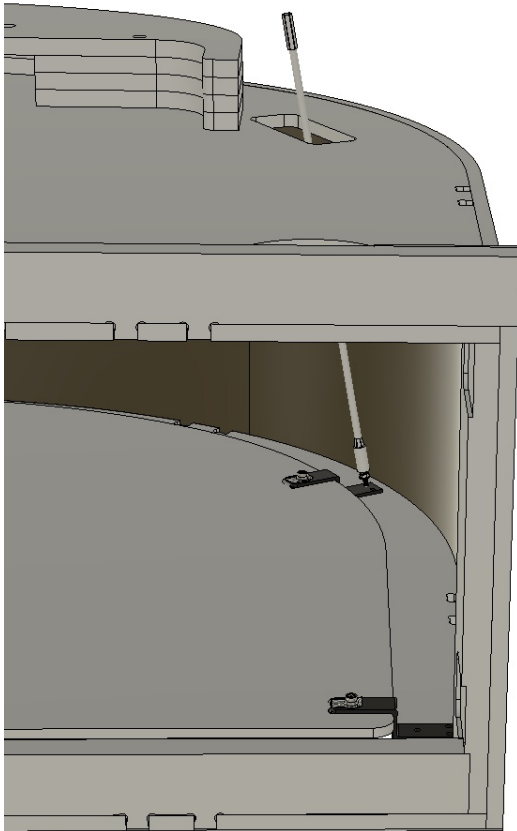

## Instructions:

Note on Turnkey and SplitKey models: you may need to remove the upright supports to allow the insert to fit/slide into the opening on the front of the piano

With the piano carefully positioned upside down as shown [and with the sides open], slide the insert into position.

The insert is the same size as the rim opening below, so line up the insert to match.

Use [the supplied] 3/8" long hex head screws to anchor each bracket to the rim. (2) fasteners in each anchor are recommended and all three in the bracket nearest the lid prop location.



*McCaslin Productions, LLC*

8201 Round Lake Rd, Laingsburg, MI 48848 USA  
+1 231.675.4253 • info@keyholeshells.com